
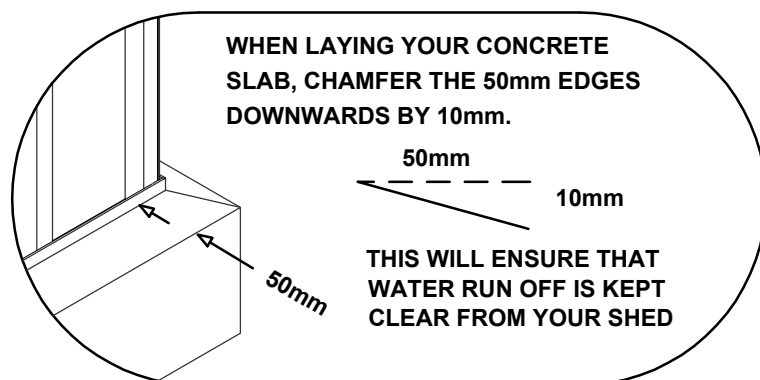


FRONT: 3.0m
SIDE: 3.66m
HEIGHT: 2.1m

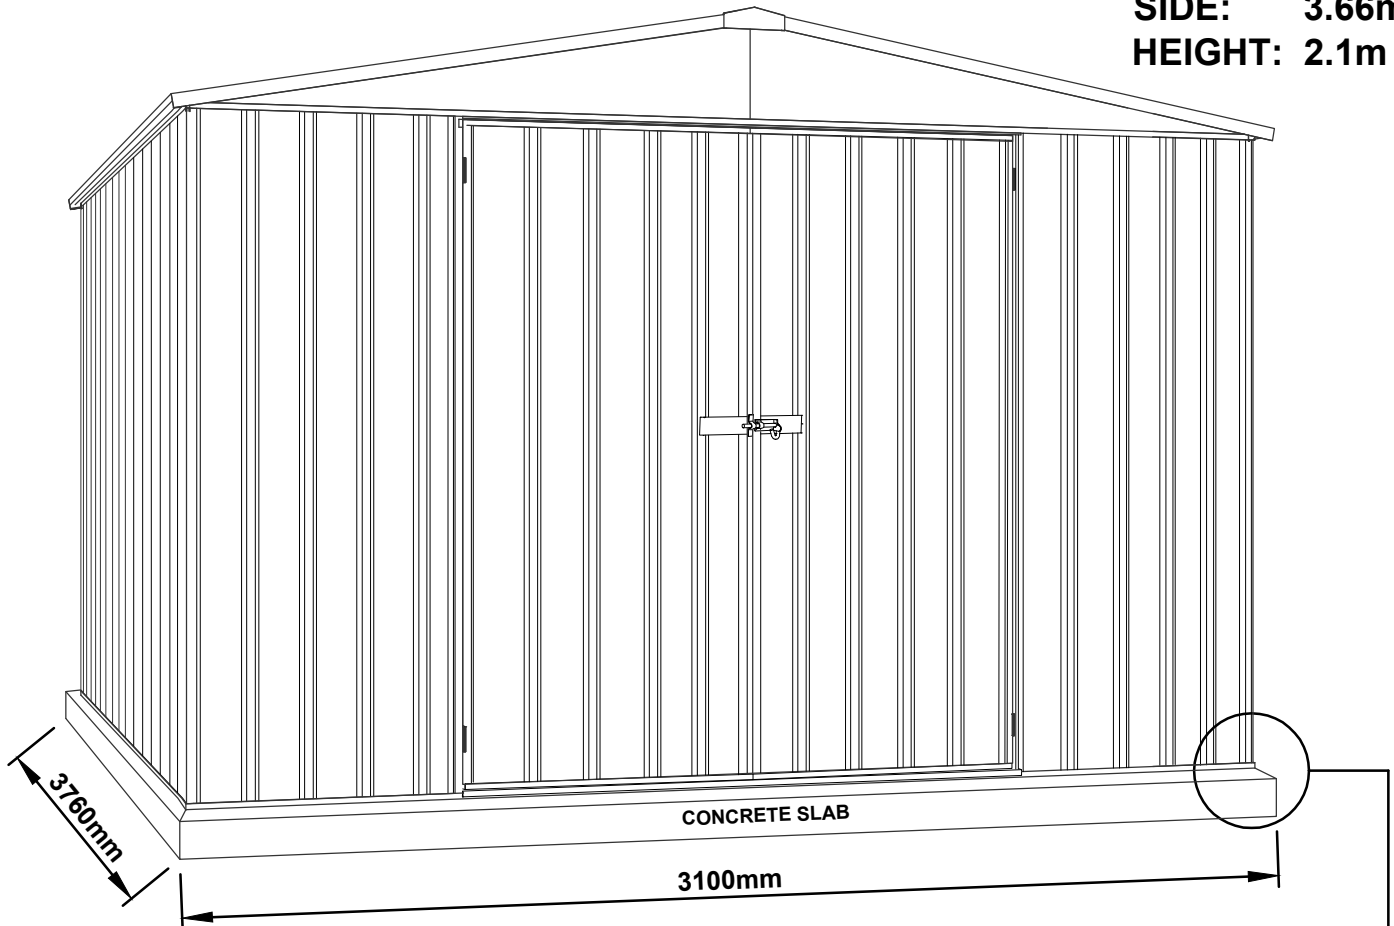

We thank you for choosing an Australian Made Shed. For further assistance please visit our detailed instructional video library at <http://www.absco.com.au/videos.php>

At ABSCO Industries we are always looking to be number ONE, so please let us know what you think of our instructions. Feedback makes us better.
feedback@absco.com.au.

GENERAL INSTRUCTIONS

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on pages three and four.

SITE PREPARATION

- The site for the shed must be level.
- It is recommended that the shed be set on a 100mm concrete slab and anchored down appropriately (refer page 15 for details).
- Anchor sets are not supplied as standard items with this product.

TOOLS REQUIRED









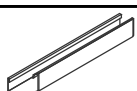
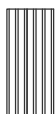




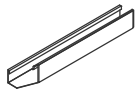
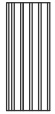

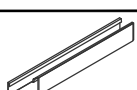
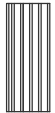

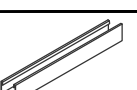
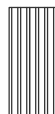




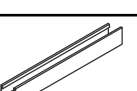
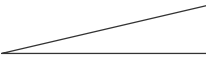

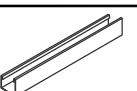
A NOTE ON SAFETY

- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions, ensure that the shed is securely anchored to a solid foundation immediately after construction is completed.
- It is highly recommended to erect the shed with two or more people.

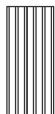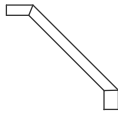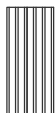


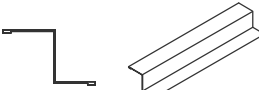
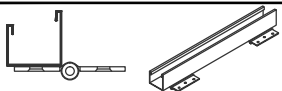
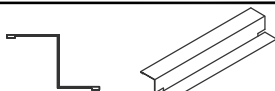
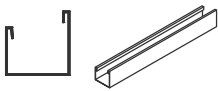
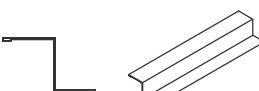
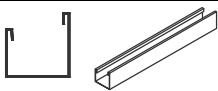

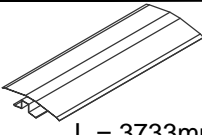


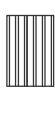

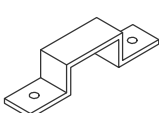


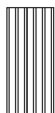

Absco Regent Shed Model: 30372R

COMPONENTS PACKING LIST - CHECK OFF ALL COMPONENTS


QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
2	 STEEL SHEET 1785mm X 773mm	30A		2	GABLE R/H L=1475mm 	16R	
8	 STEEL SHEET 1785mm X 773mm	31A		2	BRACE L: 393mm 	13A	
2	 STEEL SHEET 1546mm X 773mm	44L		1	 CHANNEL L = 2993mm 	77A	
2	 STEEL SHEET 1546mm X 773mm	45R		1	 CHANNEL L = 2993mm 	55C	
6	 STEEL SHEET 1546mm X 773mm	45A		1	 CHANNEL L = 2993mm 	77B	
2	 STEEL SHEET 1785mm X 711mm	34A		1	 CHANNEL L = 2993mm 	81B	
4	 STEEL SHEET 1785mm X 731mm	32A		2	 CHANNEL L = 3733mm 	81L	
1	 STEEL SHEET 1725mm X 773mm	A		2	 CHANNEL L = 3659 	62A	
1	 STEEL SHEET 1725mm X 773mm	B		2	 CHANNEL L = 3659mm 	81K	
2	GABLE L/H L=1475mm 	16L		2	 CHANNEL L = 3733mm 	62B	


Absco Regent Shed Model: 30372R

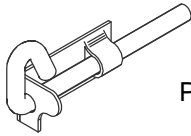COMPONENTS PACKING LIST - (CONT.) CHECK OFF ALL COMPONENTS

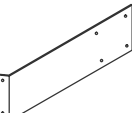QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
1	 CHANNEL L = 1568mm	79A		2	 JAMB L= 1785mm	89A	
2	 CHANNEL WITH HINGES L = 1725mm	58A		1	 JAMB L= 1568mm	90A	
1	 CHANNEL L = 1725mm	58B		4	 JAMB L= 1120mm	91A	
4	 CHANNEL L = 773mm	58C		1	 JAMB L= 1725mm	89C	
1	 RIDGE BEAM L = 3733mm	97D		4	 LIP TRIM L= 1546mm	87B	
CONTENTS OF FITTINGS PACKET							
220	 SELF TAPPING SCREWS			3	 DOOR PADBOLT	22A	
8	 4mm NUT & BOLT SET SECURE TWO PADBOLTS TO DOOR SHEET			2	 DOOR PADBOLT HASP		
12	 4mm CSK SCREW & NUT SECURE HINGES TO DOOR			12	 3mm POP RIVETS SECURE HINGES TO DOOR (ALTERNATIVE FIXING METHOD)		
1	ASSEMBLY INSTRUCTIONS			2	 DOOR STRAP L: 165mm	12A	
2	 CAP GABLE L: 170mm	14A					

VIEW OF ROOF COMPONENTS

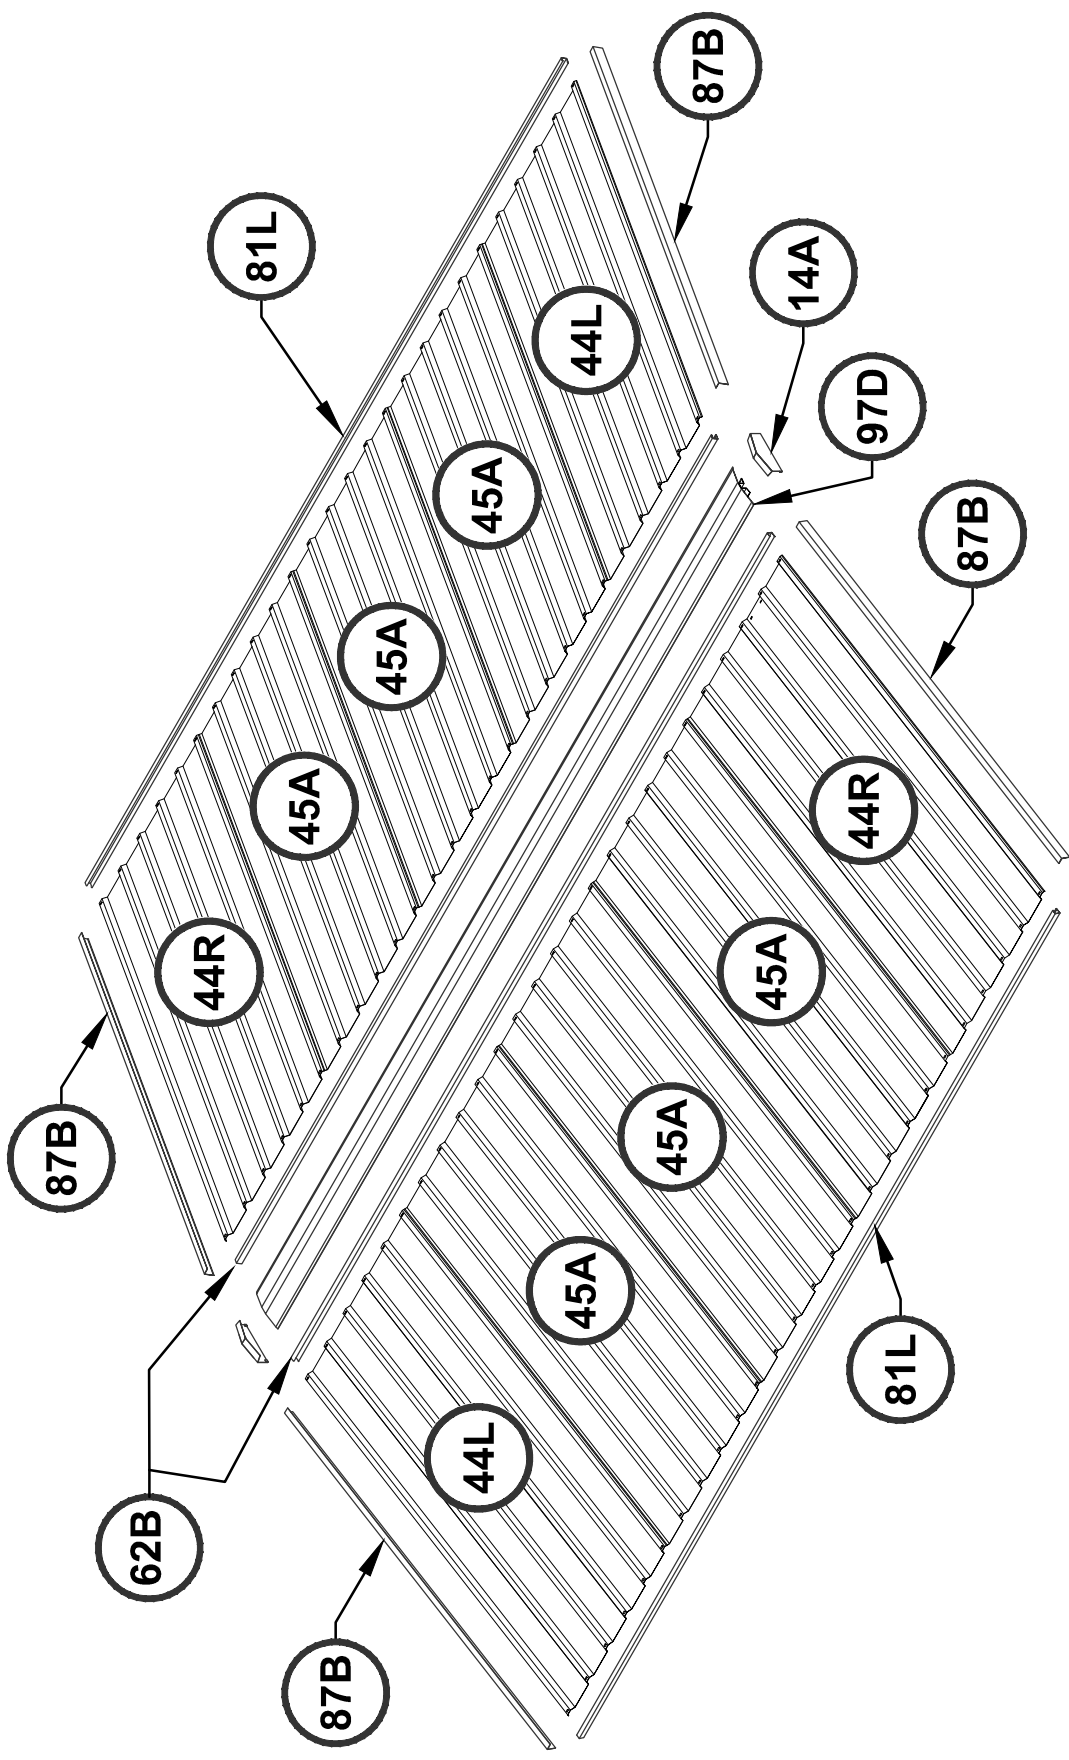


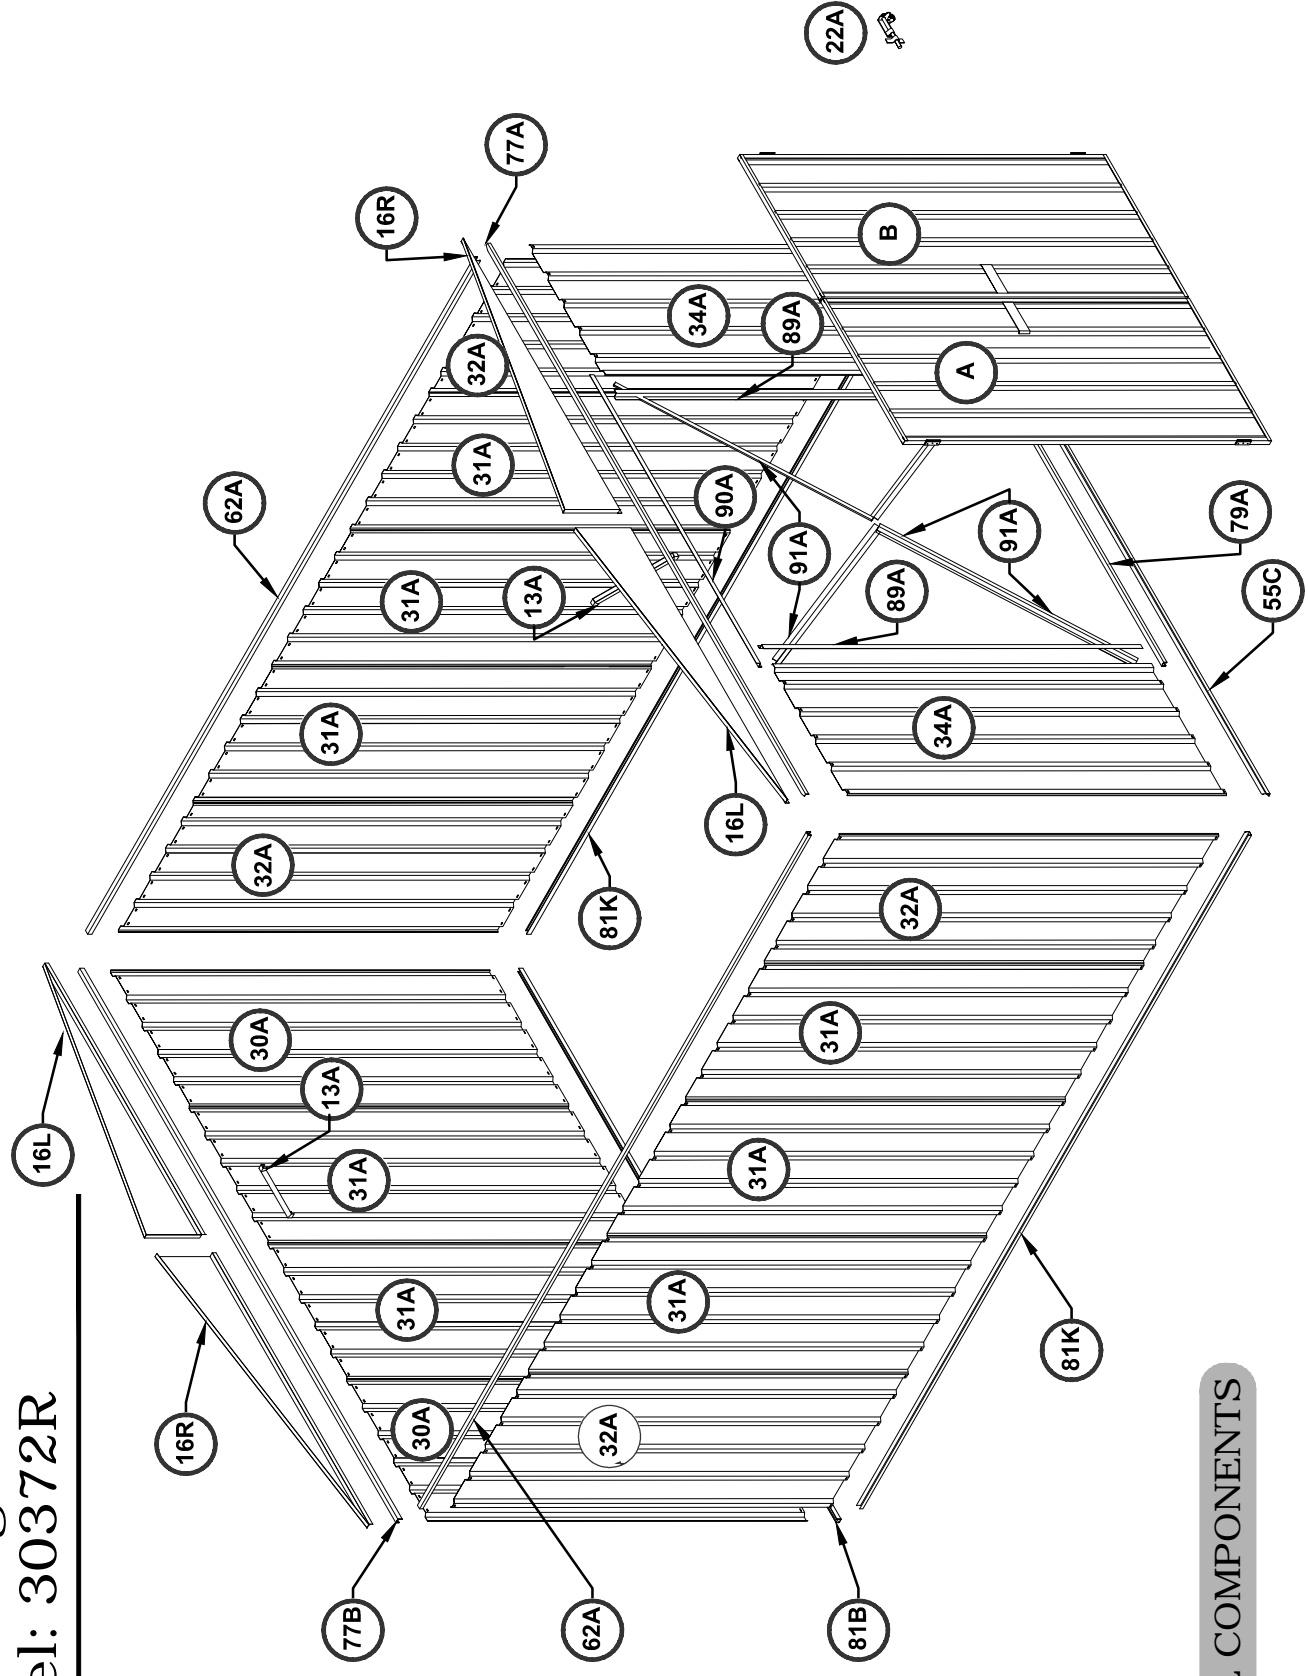

VIEW OF WALL COMPONENTS








ABSCO ASSEMBLY INTRODUCTION

The snap-tite assembly system locks all perimeter channels to all roof and wall sheets without the need for tools and fasteners.

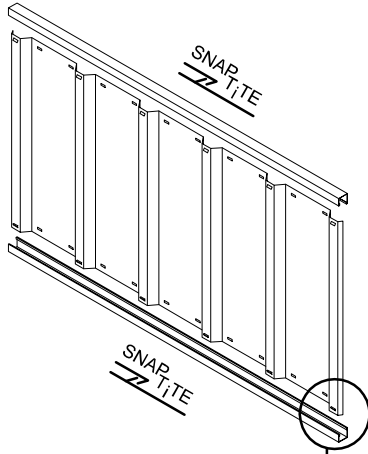


To pre-assemble the four wall panels and two roof panels, the perimeter channels are secured to the top and bottom of each panel using the snap-tite system, as detailed on the following pages wherever you see the symbol.

SNAP TITE

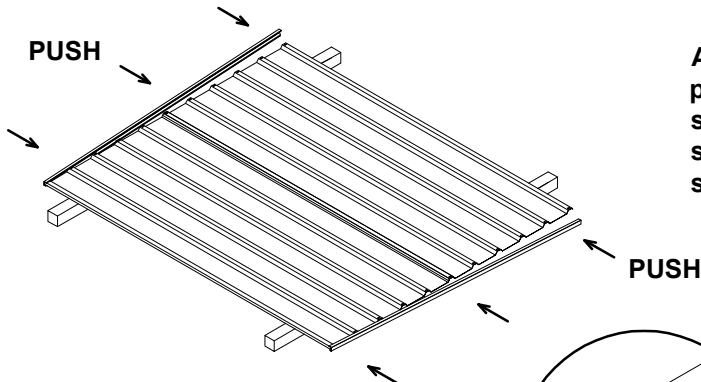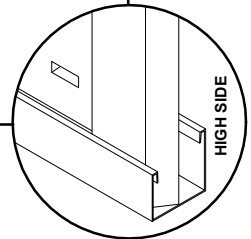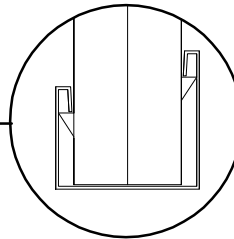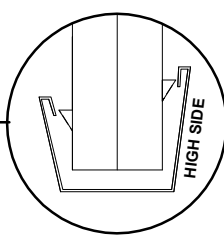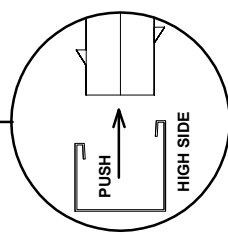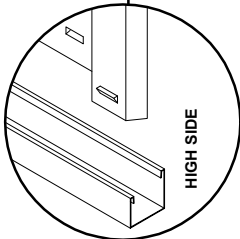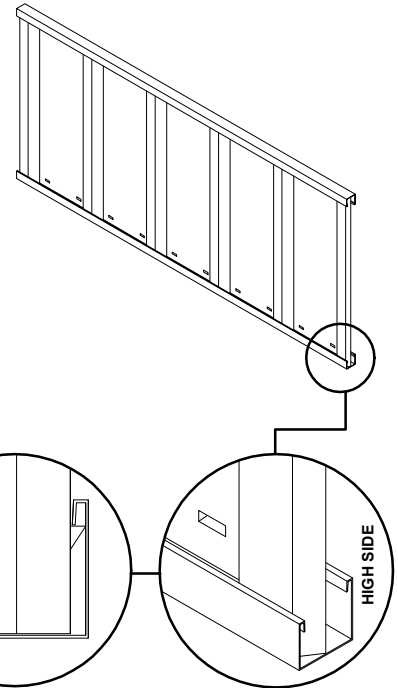

After joining sheets together, position channel over one end of the sheets, gently tapping it over the snap-tite lugs, working along the sheets to the other end.

Position sheets on timbers, trestles or partly over edge of concrete slab.

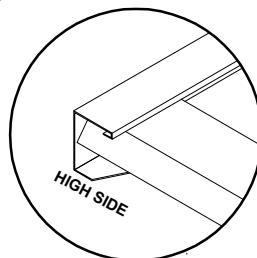

Each perimeter channel must finish flush with the edges of the sheets. the snap-tite system allows adjustment for this process by simply tapping the channel along the sheets until each end is neatly flush.

FASTENING SYMBOLS



Join components together with one screw at this location only, as some channel sections have extra holes that are not required for this model of garden shed



3mm POP RIVETS





4mm NUT & BOLT SET




Do not join components together at this location yet, as the screw may obstruct further assembly of other components

DOOR PANEL ASSEMBLY

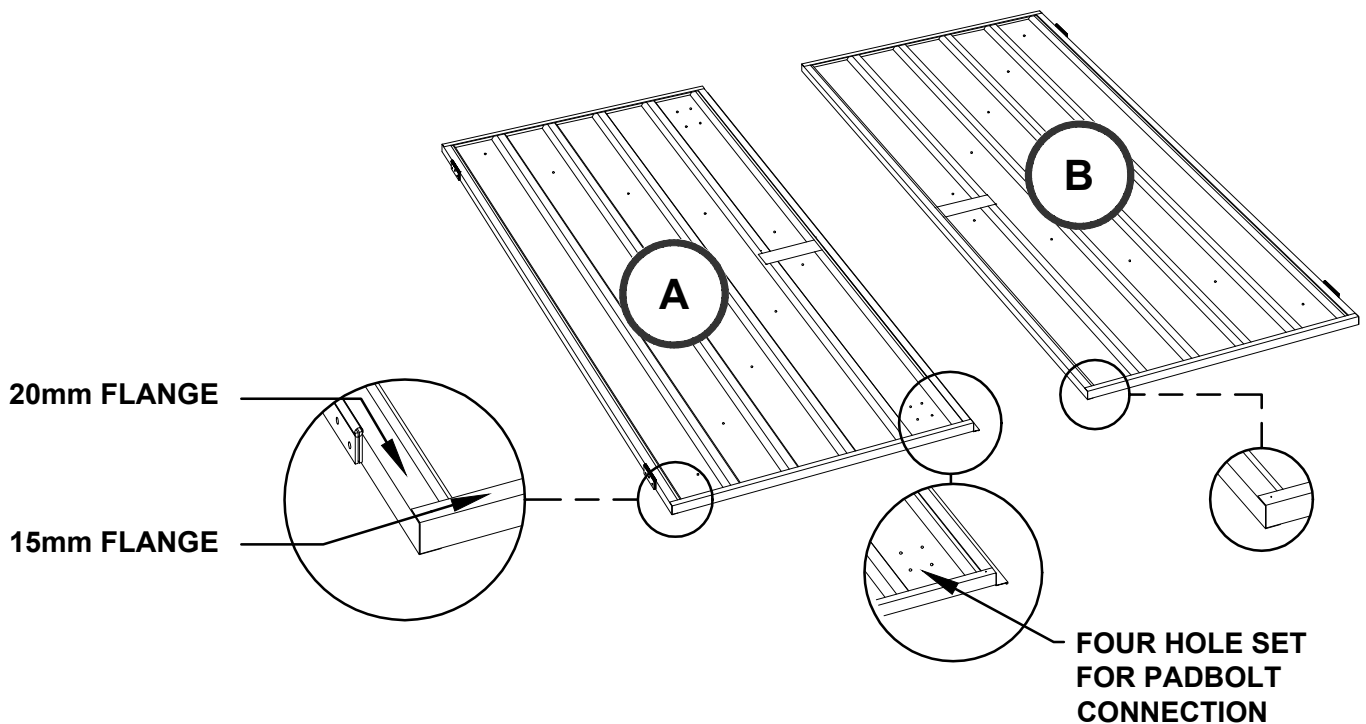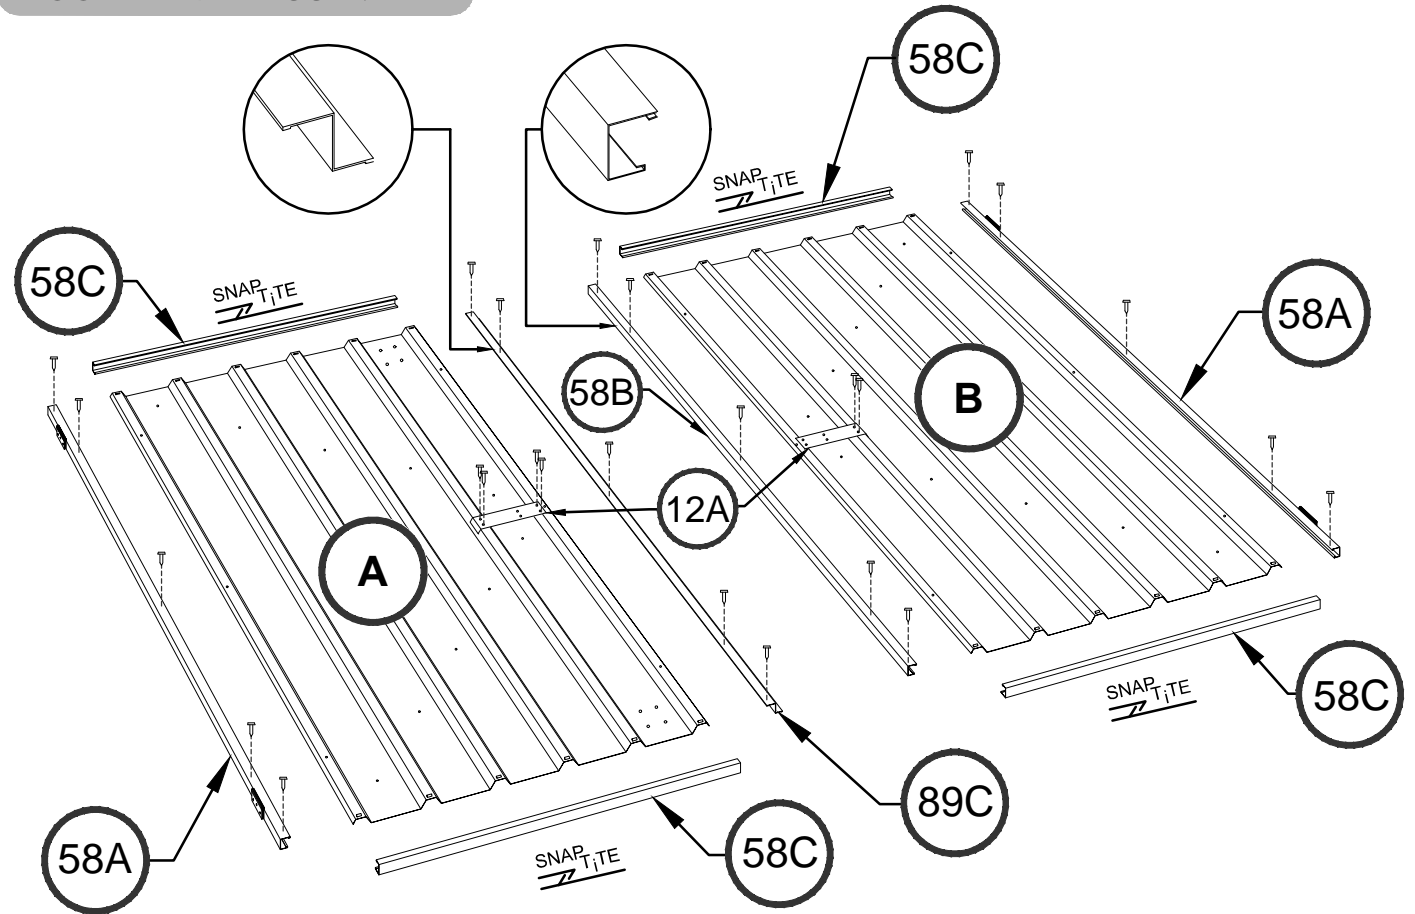


REAR PANEL ASSEMBLY

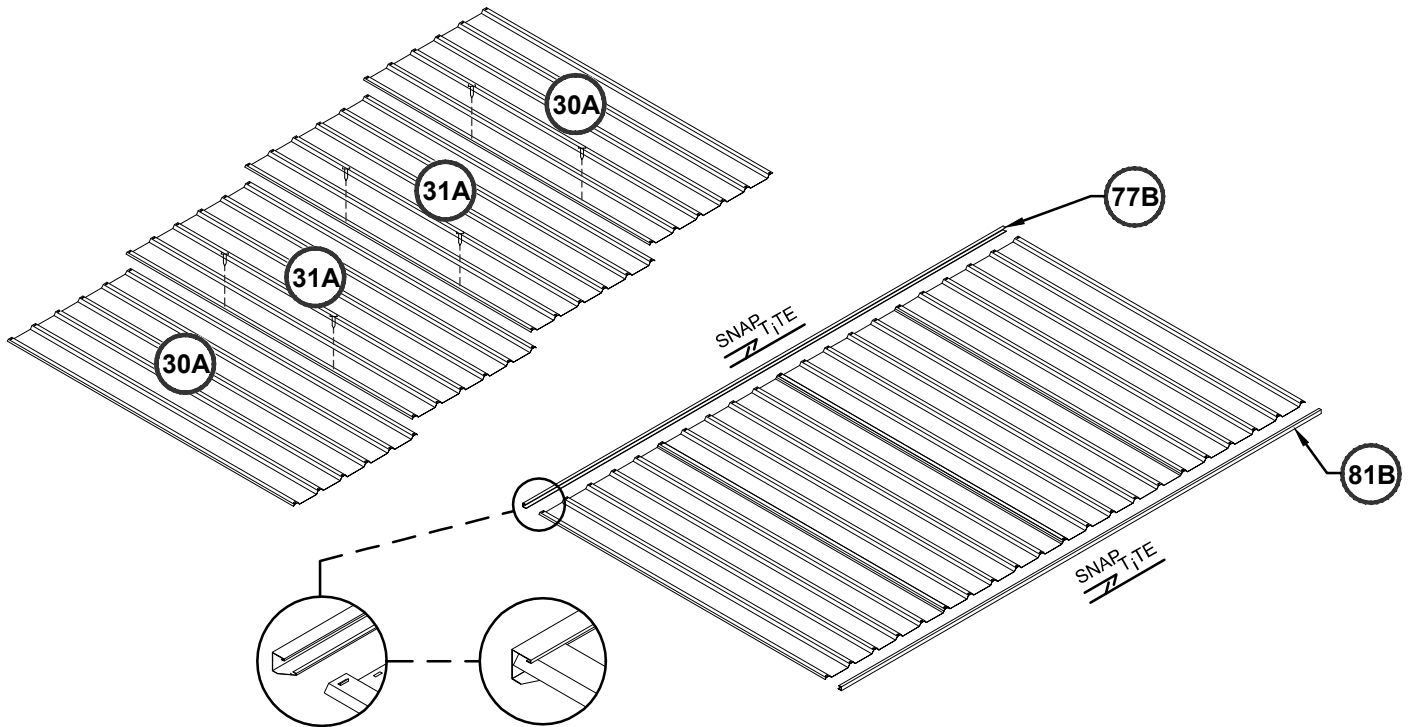


SIDE PANEL ASSEMBLY

(2 Required)

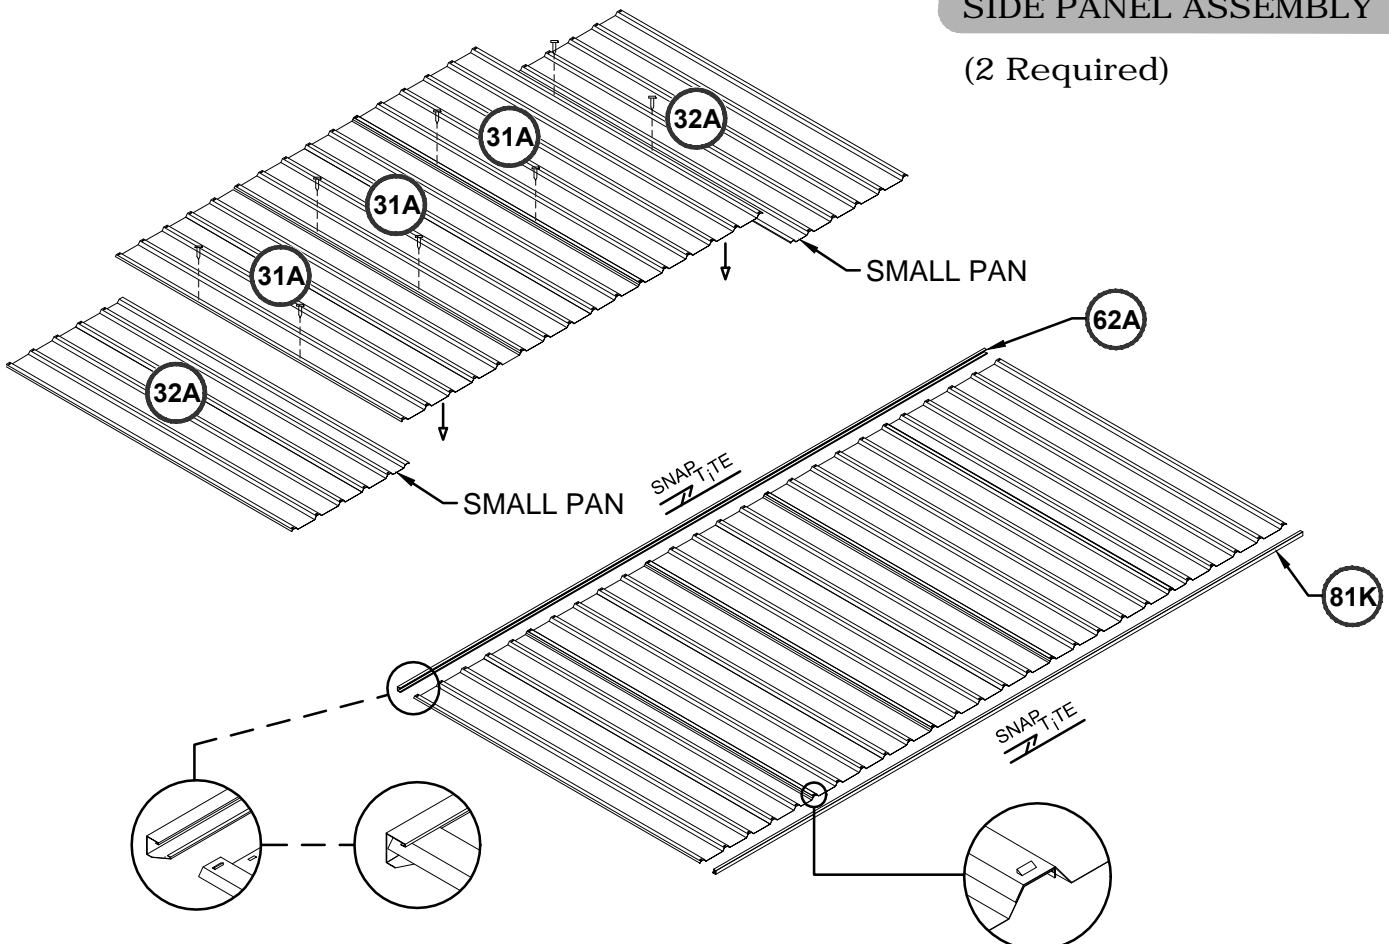


ROOF PANEL ASSEMBLY


(2 Required)

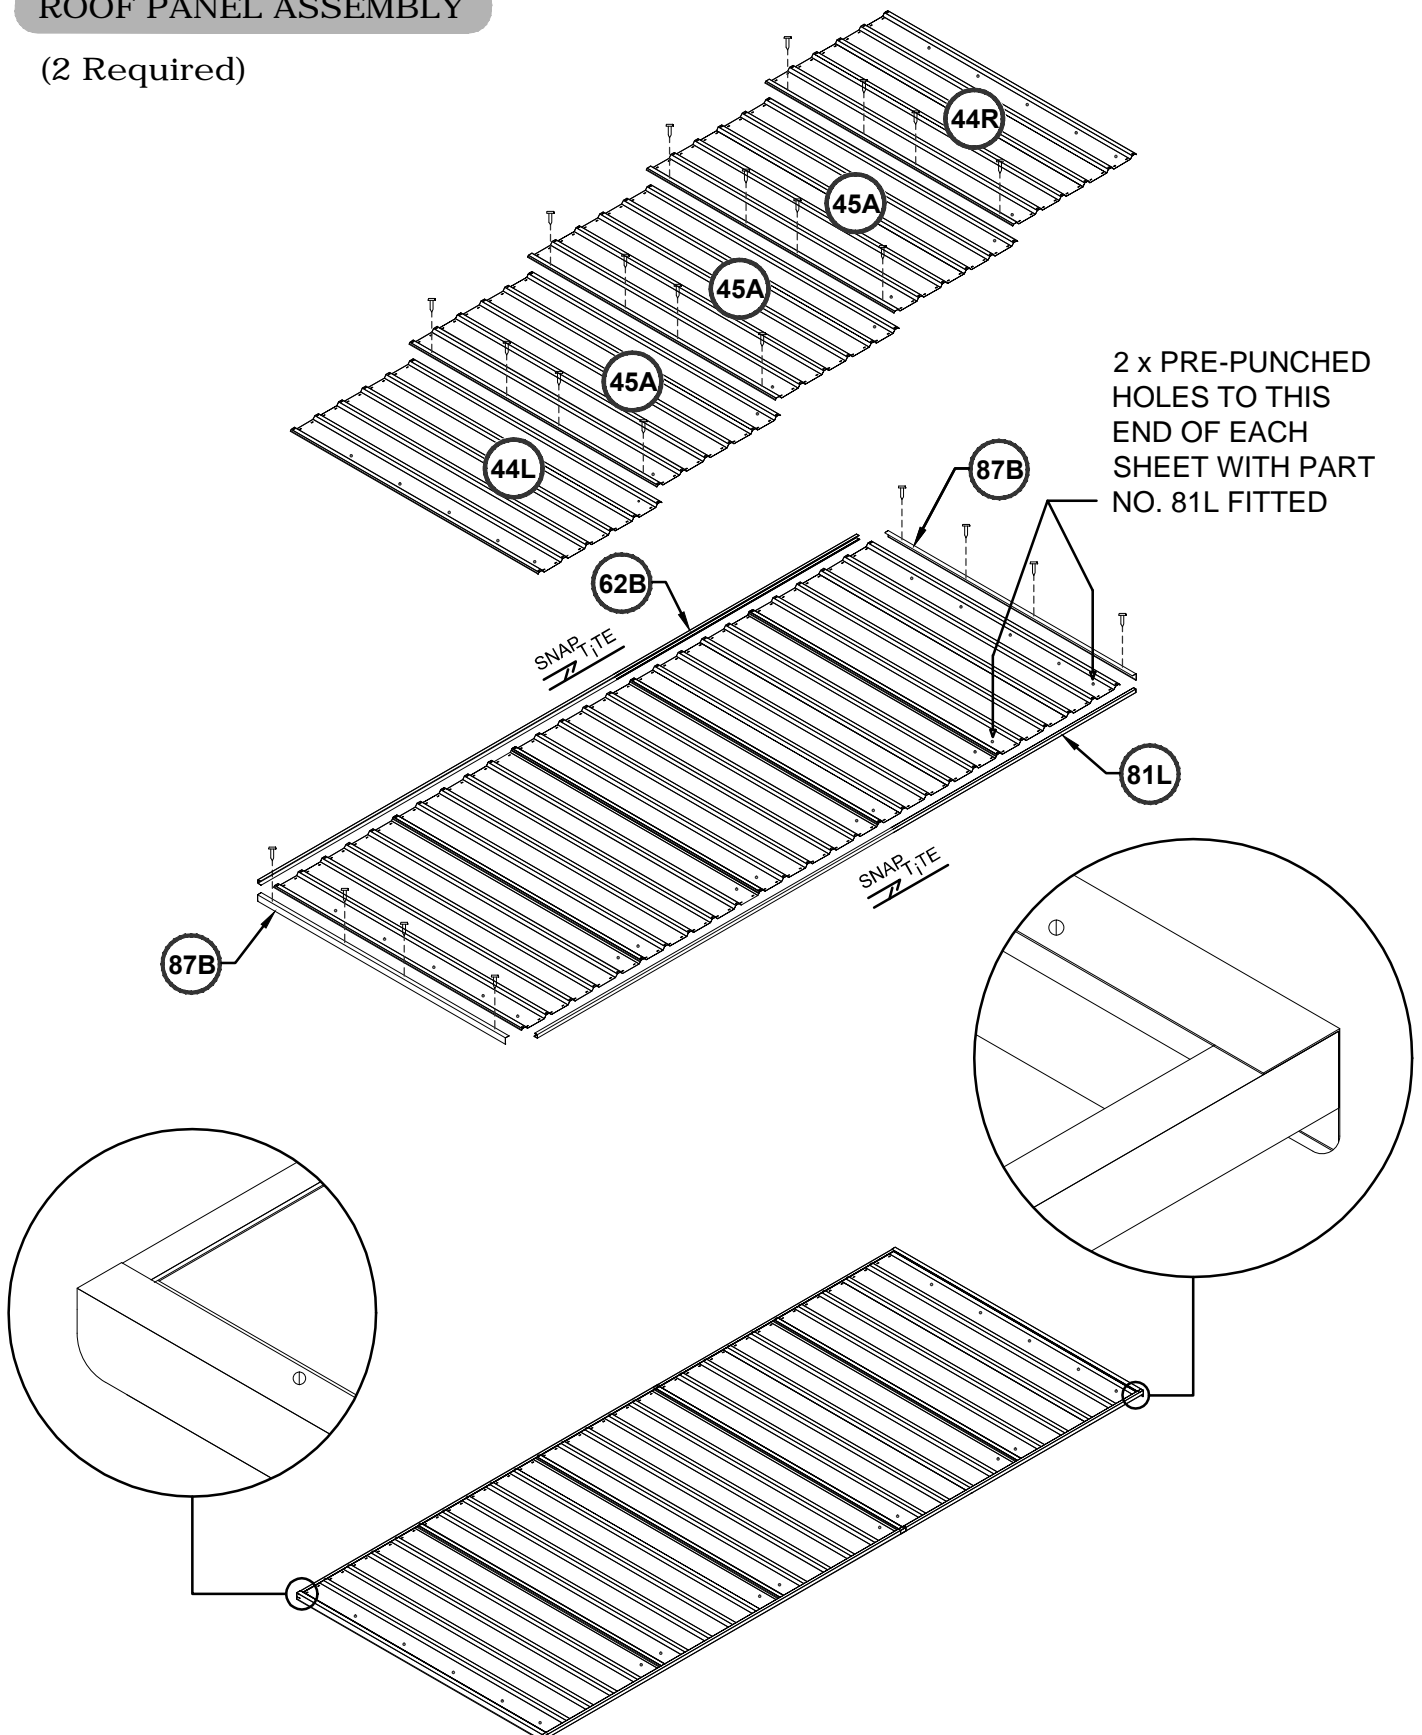

FRONT PANEL ASSEMBLY

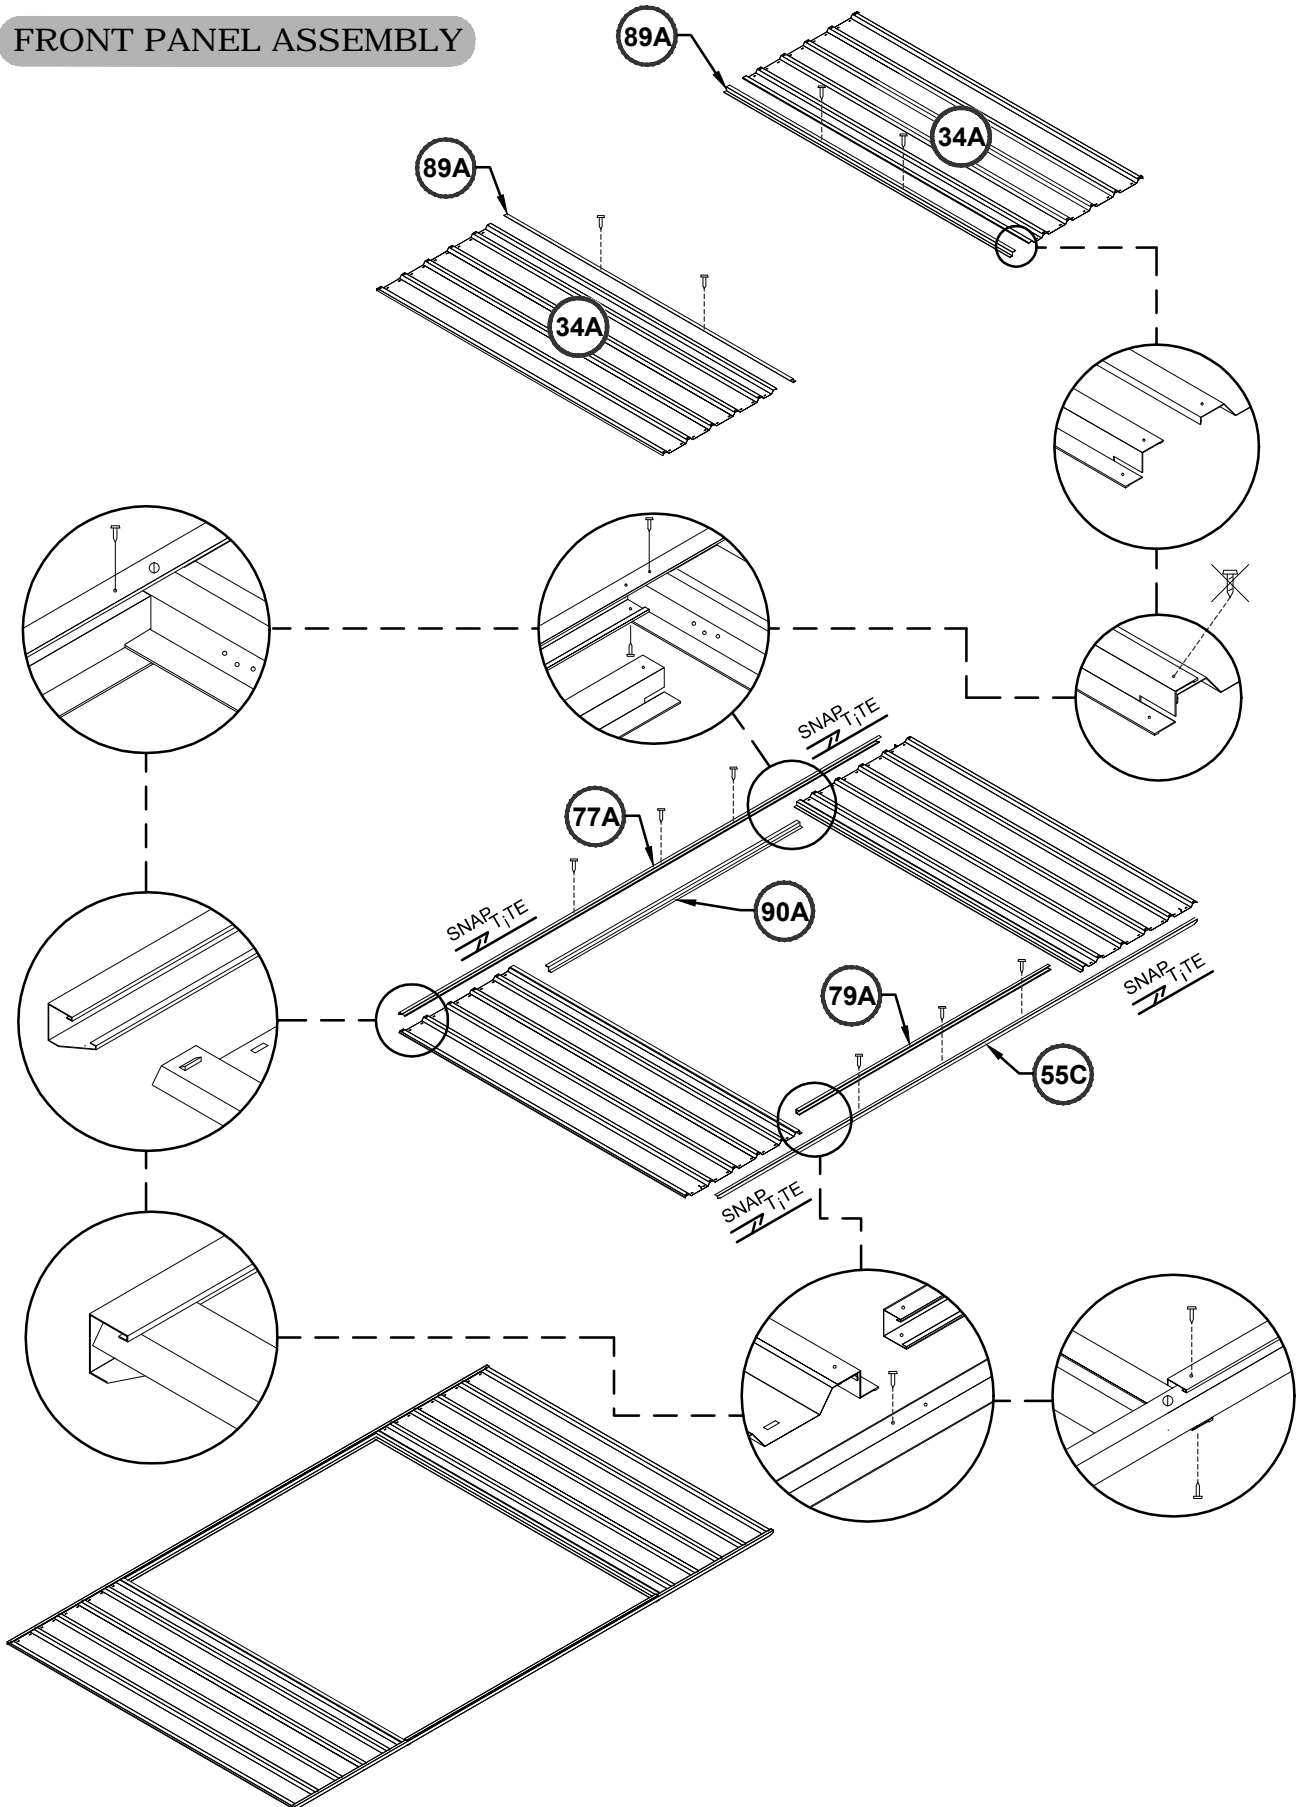


DOOR PANEL ASSEMBLY

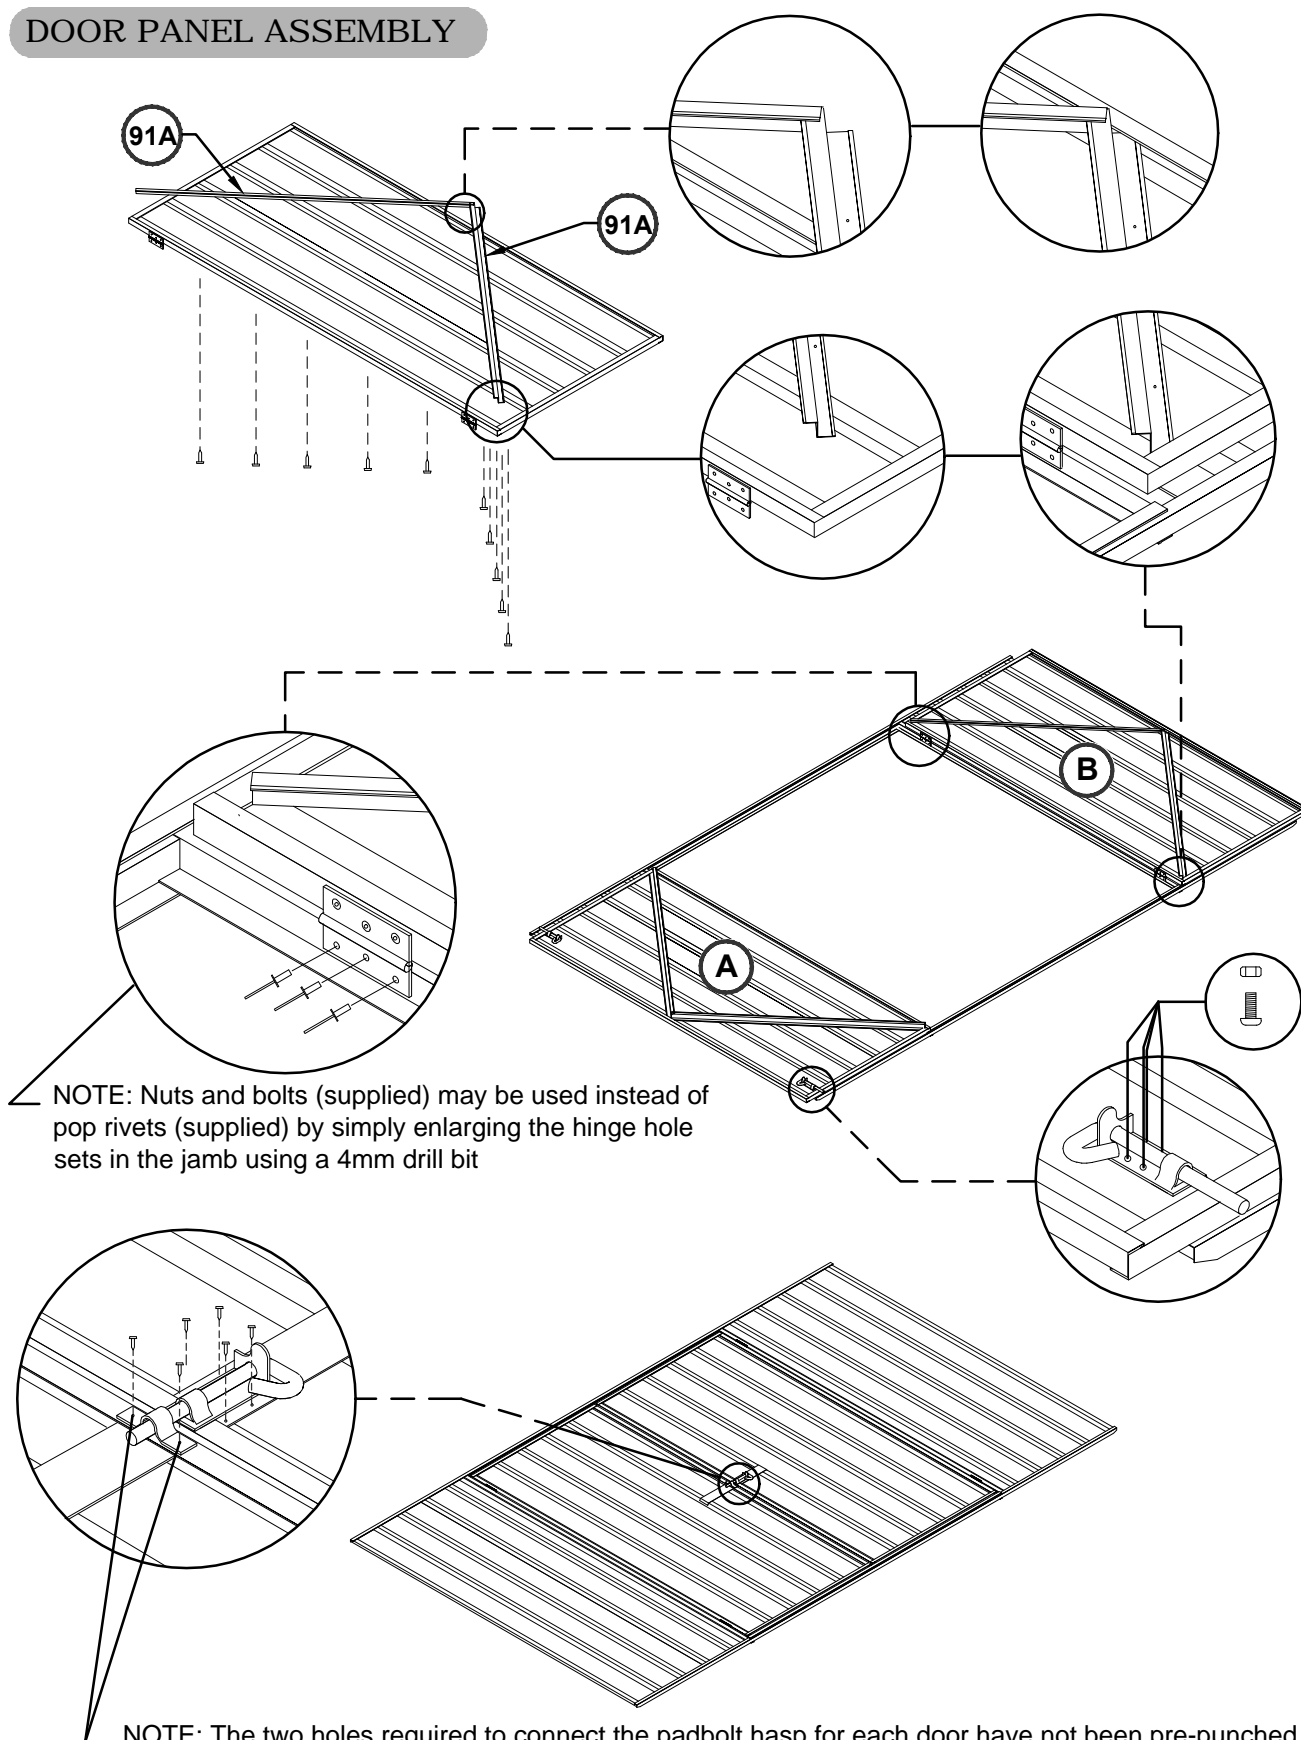

Absco Regent Shed Model: 30372R


PANEL CONSTRUCTION

NOTE: Take care to ensure that both front and rear wall panels are not positioned upside down. the top channel of each panel is pre-punched for attaching roof sheets, the bottom channels are not.

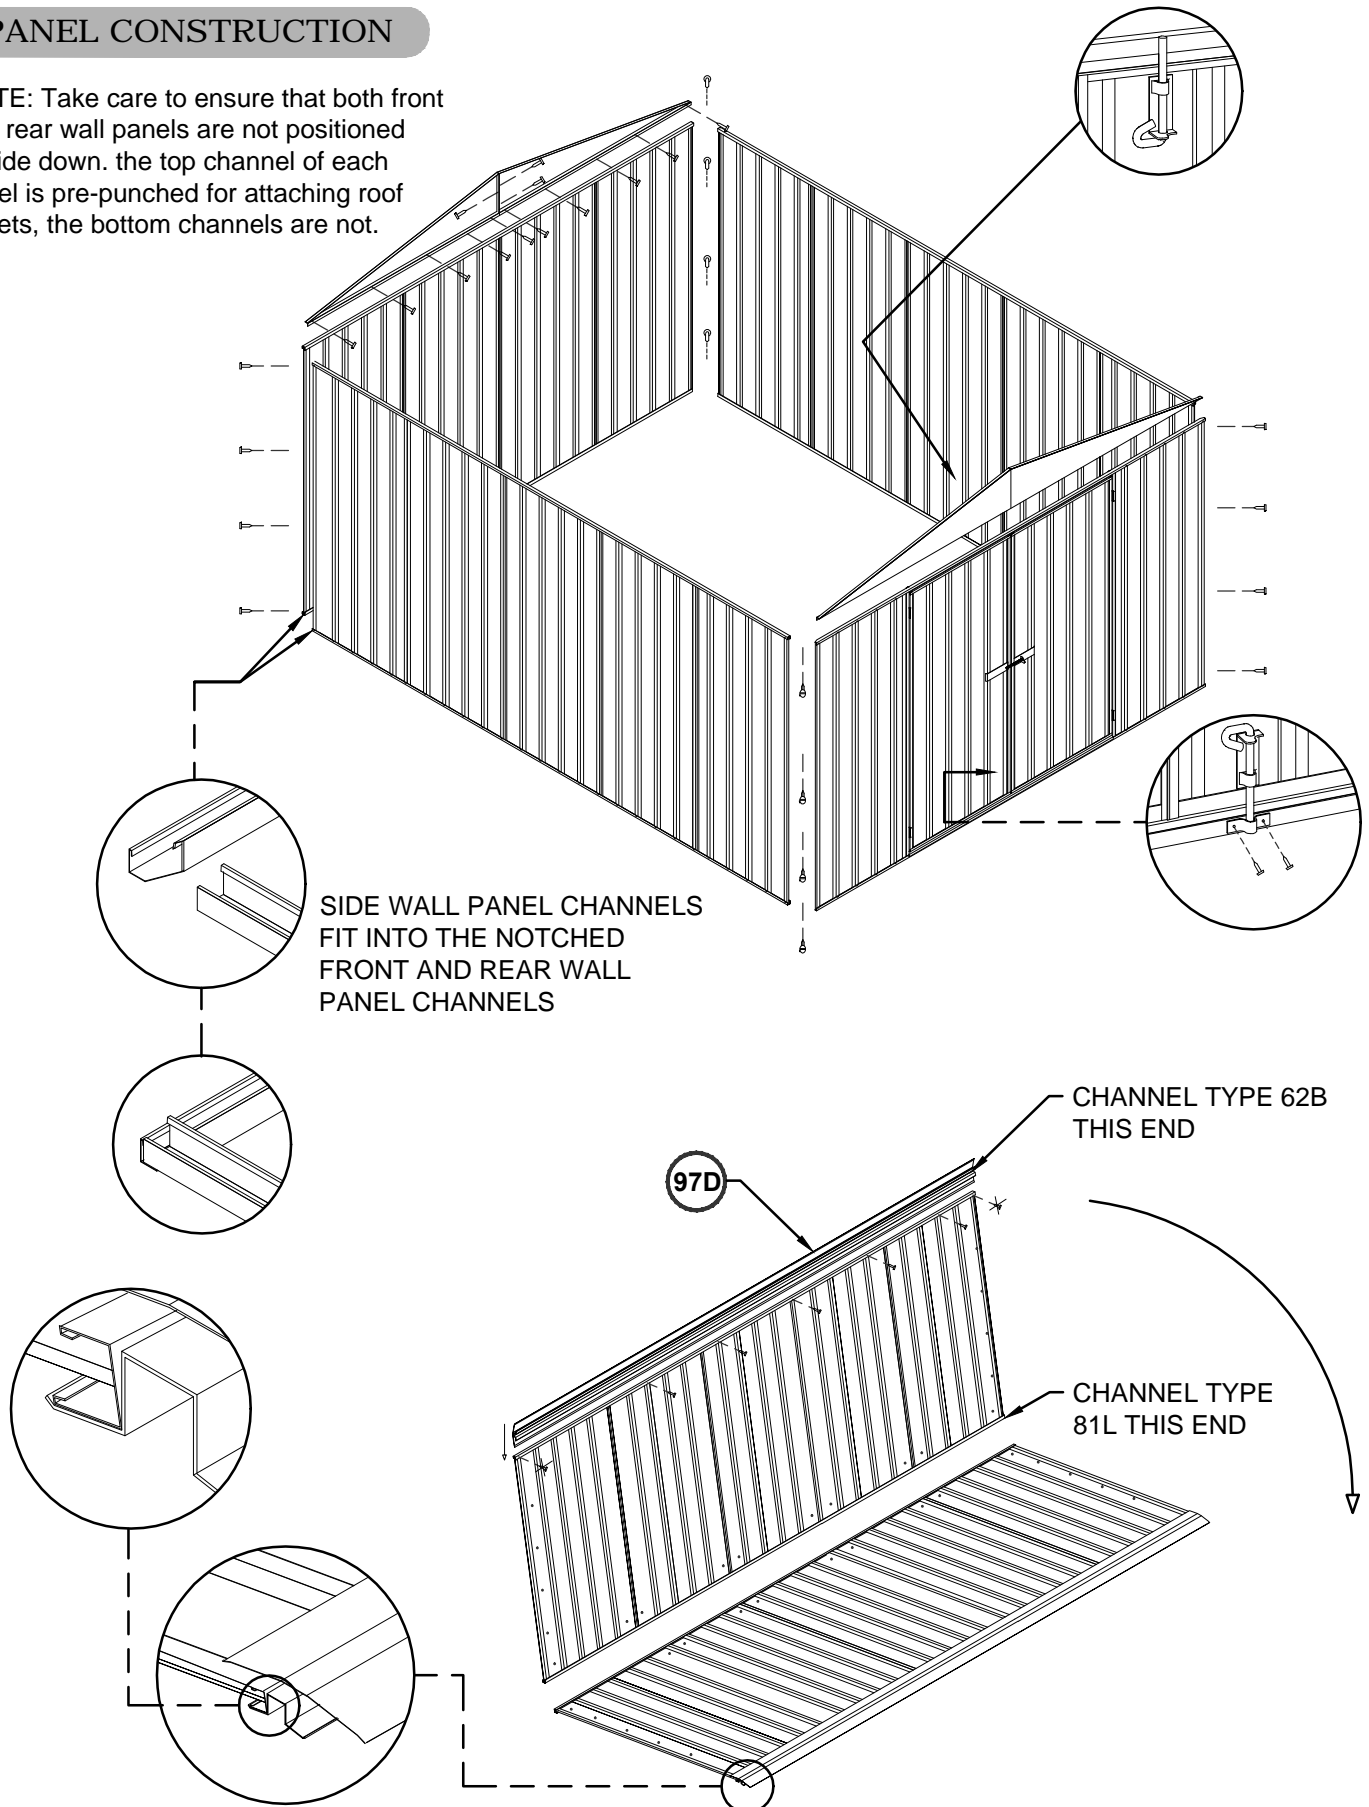


ROOF CONSTRUCTION


OUTSIDE VIEW

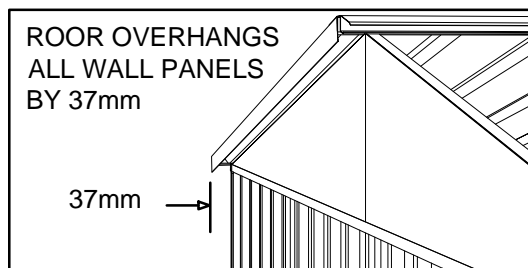


INSIDE VIEW

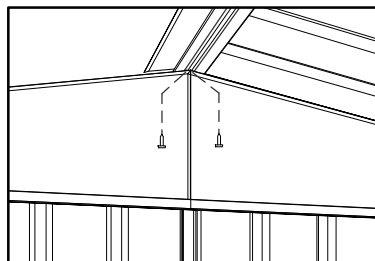

SECURE RIDGE BEAM TO
GABLE SECTIONS WITH
TWO SCREWS AT EACH
END. SECURE EACH ROOF
PANEL WITH ONE SCREW
IN EACH CORNER ONLY
AT THIS STAGE


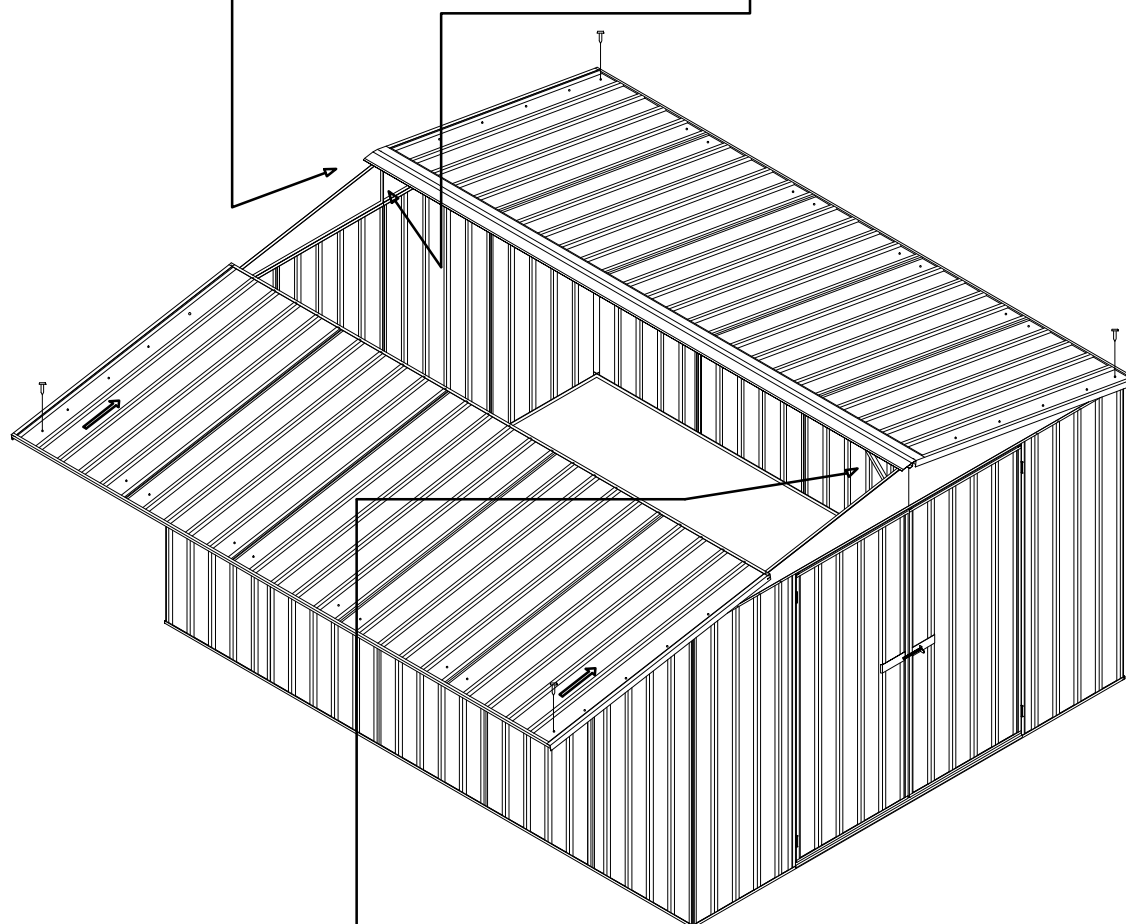


INSIDE VIEW

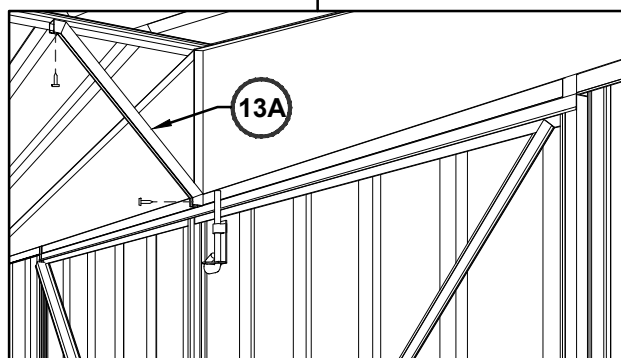


AFTER ATTACHING BOTH ROOF
PANELS TO WALLS AS SHOWN
ABOVE, FIT ONE REGENT BRACE
TO THE RIDGE BEAM AND FRONT
WALL AS SHOWN. YOU WILL HAVE
TO REMOVE AND REPLACE
EXISTING SCREWS AT FIXING
LOCATIONS. REPEAT THIS
PROCEDURE FOR THE REAR
WALL REGENT BRACE


FINAL CONSTRUCTION

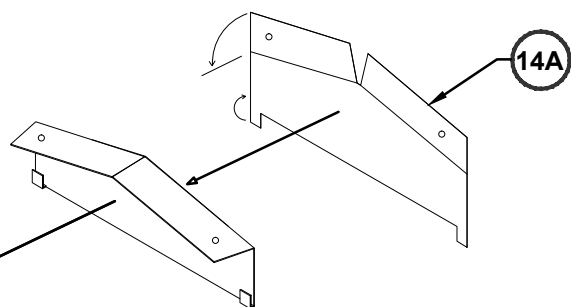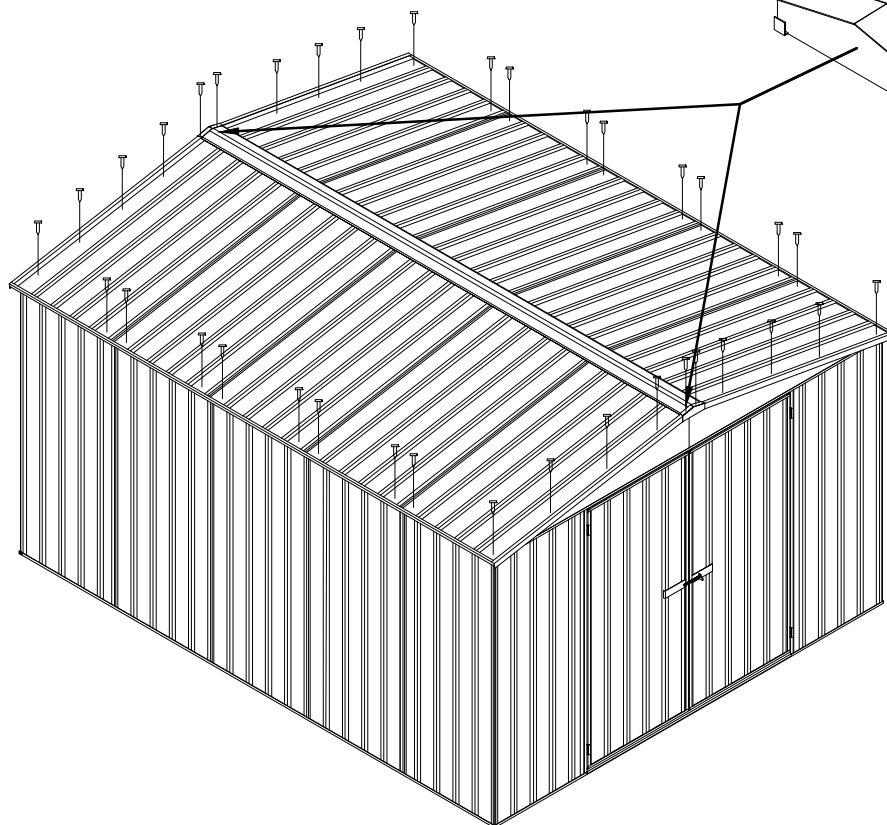

BEND THE TOP AND BOTTOM FLANGES AS SHOWN, THEN HOOK THE BOTTOM FLANGES UNDER THE TOP CHANNEL AND SCREW THE TOP FLANGES FOR BOTH AS SHOWN GABLE CAPS

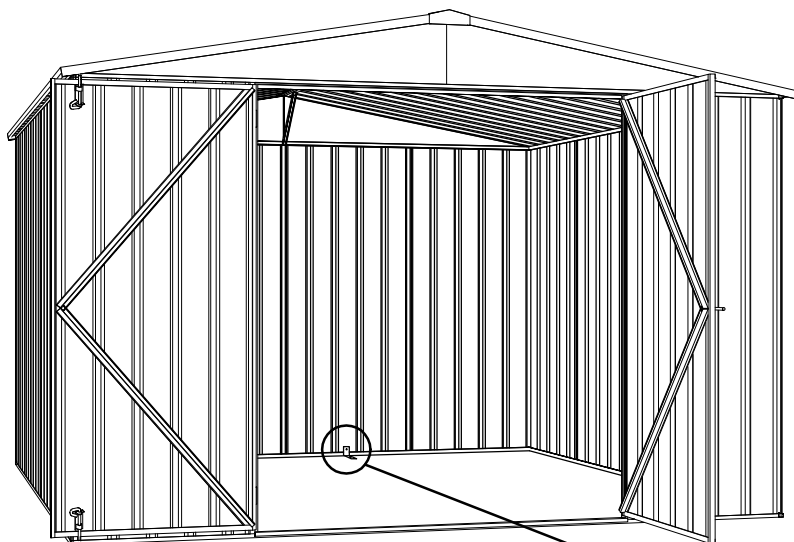

ANCHORING OF SHED

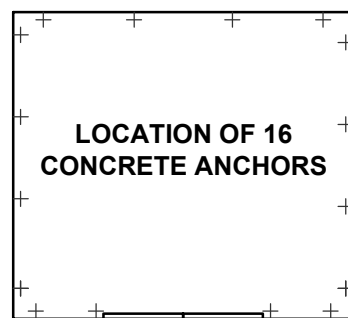

LOCATION OF 16 CONCRETE ANCHORS

- EACH ANCHOR CONSISTS OF ONE NUT, BOLT, DYNABOLT AND STEEL ANGLE
- DRILL A 10mm HOLE INTO THE WALL SHEET
- DRILL A 10mm HOLE INTO THE CONCRETE

